




1. General

This sensor uses a laser source to scan 270° field of view. Positions of objects in the range are calculated with step angle and distance. Sensor outputs these data through communication channel.

2. Structure

2-1.Strucure diagram

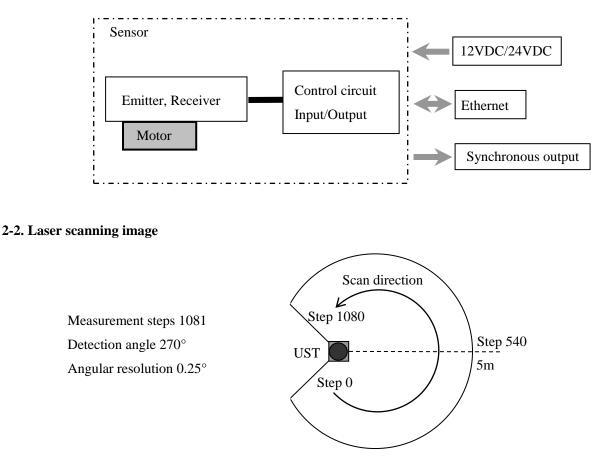

3. Important notes

- (1) This sensor is not a safety device/tool.
- (2) This sensor cannot be used for human body detection as per the machinery directives.
- (3) Hokuyo products are not developed and manufactured for the use in weapons, equipments or related technologies intended for destroying human lives or causing mass destruction. If such possibilities or usages are revealed, the sales of Hokuyo products to those customers might be halted by the laws of Japan such as Foreign Exchange Law, Foreign Trade Law or Export Trade control order. In addition, Hokuyo products are for the purpose of maintaining the global peace and security in accordance with the above law of Japan.

Drawing No

Product name	Scanning Laser Range Finder	
Model	UST-05LX	
Supply voltage	12VDC/24VDC (Operation range 10 to 30V ripple within 10%)	
Supply current	150mA or less (When using DC24V)	
Suppry current	(during start up 450mA is necessary.)	
Light source	Laser semiconductor (905nm) Laser class 1 (IEC60825-1:2007)	
	0.06m to 5m (white Kent sheet)	
Detection range	0.06m to 2m (diffuse reflectance 10%)	
•	Max. detection distance : 15m	
Accuracy ± 40 mm (*1)		
Repeated accuracy	σ< 30mm (*1)	
Scan angle		
Scan speed	25ms (Motor speed 2400rpm) 0.25°	
Angular resolution		
Start up time	Within 10 sec (start up time differs if malfunction is detected during start up)IP reset input, photo-coupler input (current 4mA at ON)	
Input	Synchronous Output, photo coupler open collector output 30VDC 50mA	
Output	MAX.	
Interface	Ethernet 100BASE-TX	
LED display	Power supply LED display (Blue): Blinks during start up and malfunction state.	
LLD display	Less than 80,000 k Λ	
Surrounding intensity	Note : Avoid direct sunlight or other illumination sources as it may cause sensor	
arrounding intensity	malfunction	
Ambient temperature		
and humidity	-10° C to $+50^{\circ}$ C, below 85%RH (without dew, frost)	
Storage temperature		
and humidity	-30° C to $+70^{\circ}$ C, below 85% RH (without dew, frost)	
Vibration resistance	10 to 55Hz double amplitude of 1.5mm for 2hrs in each X, Y, and Z direction	
	55 to 200Hz 98m / s^2 sweep of 2min for 1hr in each X,Y and Z direction	
Vibration resistance	55 to 150Hz 19.6m / s^2 sweep of 2min for 30min in each X,Y and Z	
(Operating)	direction	
Shock resistance	196m/s ² (20G) X,Y and Z direction 10 times.	
	(EMI)	
	EN61326-1:2013	
	EN55011:2009 + A1:2010	
	(EMS)	
EMC standards	EN61326-1:2013	
LIVIC standards	EN61000-4-2:2009	
	EN61000-4-3:2006 + A1:2008 + A2:2010	
	EN61000-4-4:2012	
	EN61000-4-6:2009	
	EN61000-4-8:2010	
Protective Structure	IP65	
Weight	130g (Excluding cable)	
Material	Front case: Polycarbonate, Rear case: Aluminum	
Dimensions		
(W×D×H)	$50 \times 50 \times 70$ mm (sensor only)	

Title

UST-05LX Specification

Drawing No

5. Measurement Data

• 111	. Measurement Data		
]	Distance Value (x) Meaning		
	x < 21	Output numerical number "4" as Measurement error	
2	$21 \leq x \leq 15000$ Valid distance [mm]		
	x > 15000	Output numerical number "65533"	
		as Measurement error (object does not exists or object has low reflectivity)	

6. Connection

6-1. Power source, I/O cable

Cable length: 1000mm Flying lead cable (AWG28)

Color	Signal
Red	COM Input +
Gray	COM Output -
Light Blue	IP Reset Input
Orange	Synchronous Output
Brown	+VIN (12VDC/24VDC)
Blue	-VIN


Note: Direction of Inputs and Outputs are mentioned from the sensor's side.

6-2. Ethernet cable

Cable length: 300mm

Color	Signal
Blue	TX+
White	TX-
Orange	RX+
Yellow	RX-

7. LED display

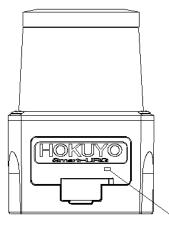

Power supply display

(Blinks during start up and malfunction state)


Title

UST-05LX Specification

Drawing No

C-42-04344



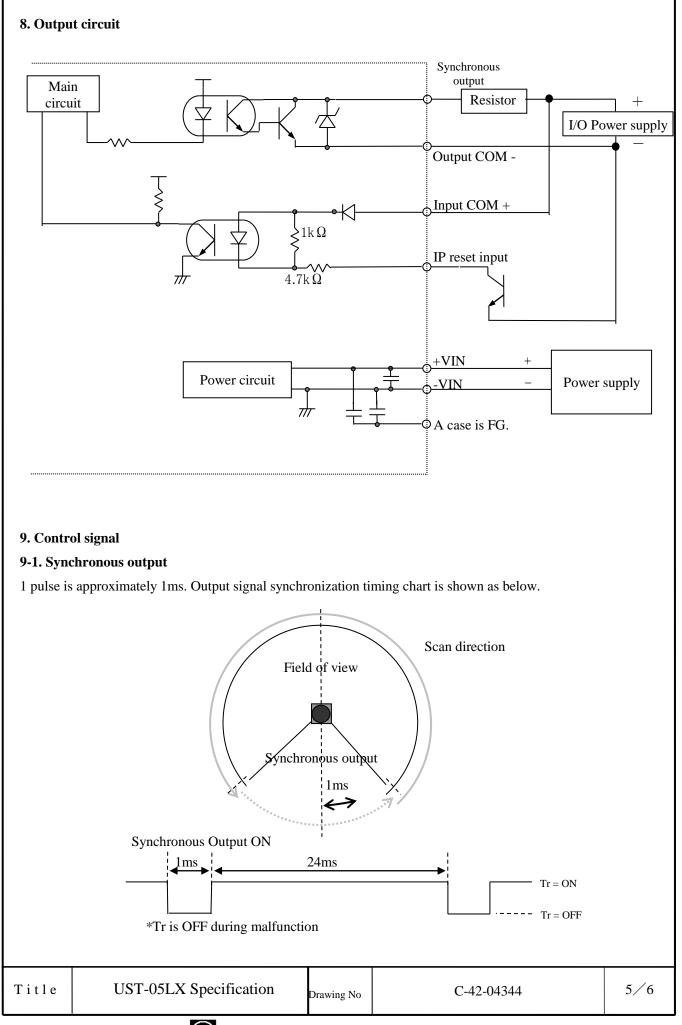

10. Ethernet Setting

1. The setting value is as below.

IP Initial value :192.168.0.10 Port number :10940

2. About Initialization of IP address

To reset IP address to the factory default value, please provide power to input circuit (see Section 8) and connect IP RESET LINE to COM- for more than 2 sec.

After IP RESET LINE is disconnected from COM- or opened, the sensor LED blinks and the sensor start to reboot.

11. Cautions for operation

This sensor uses high speed processing components that generate heat during operation.

The heat is concentrated at the bottom of the unit. When mounting, please attach the bottom of the unit to a good heat sink. A 200mm x 200mm x 2mm aluminum plate is recommended as a heat sink.

If multiple sensors are installed side by side, a sensor might mistake the laser pulses of other units as its own and the detection error occurs. When it happens, usually the error lasts for one or two steps of measurement. Please use software filters to handle this type of error.